 




SERIES ARD100/ARD200




Mtrl.nr: 9814 09 62 • Ritn.nr 8473 vers. A • Rev 1512



Series ARD100
Series ARD200

CE
LVD 2006/95/EC valid until April 19th 2016
LVD 2014/35/EU valid from April 20th 2016
EMC 2004/108/EC valid until April 19th 2016
EMC 2014/30/EU valid from April 20th 2016
RoHS 2011/65/EU

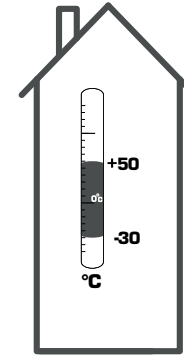










Series ARD100



Series ARD200




Series 3F, 4F

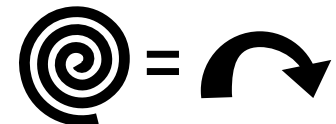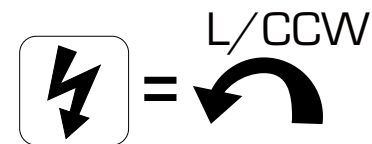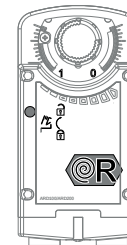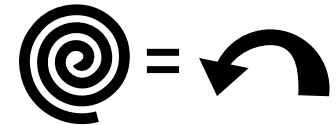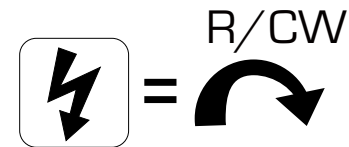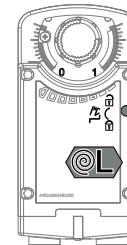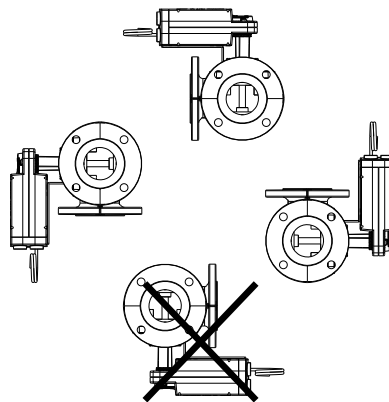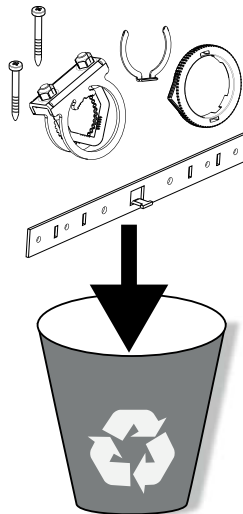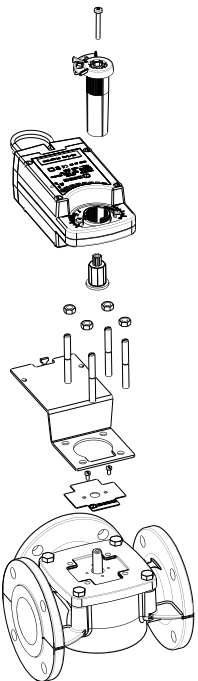

Valve settings


V 1A

R/CW

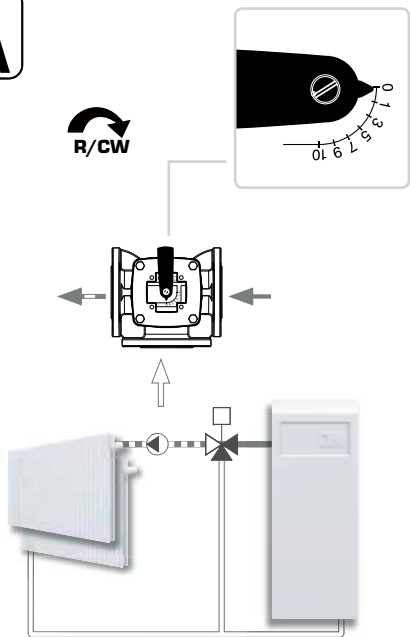


V 1B

L/CCW

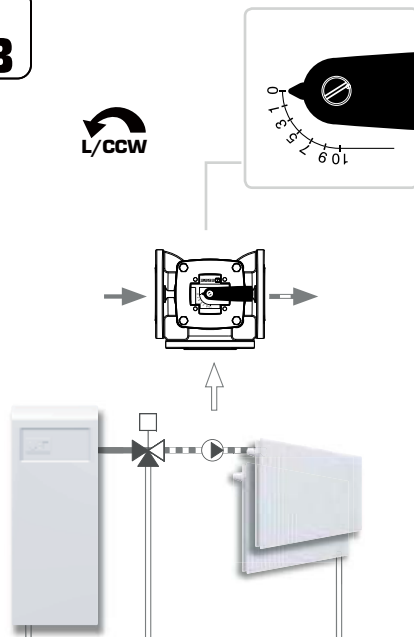


V 2A

R/CW

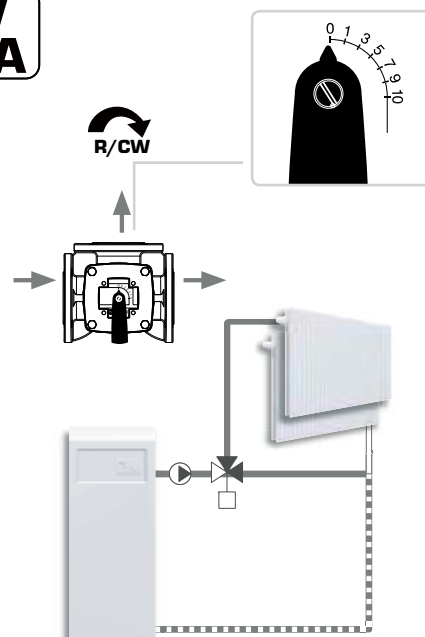

V 2B


L/CCW

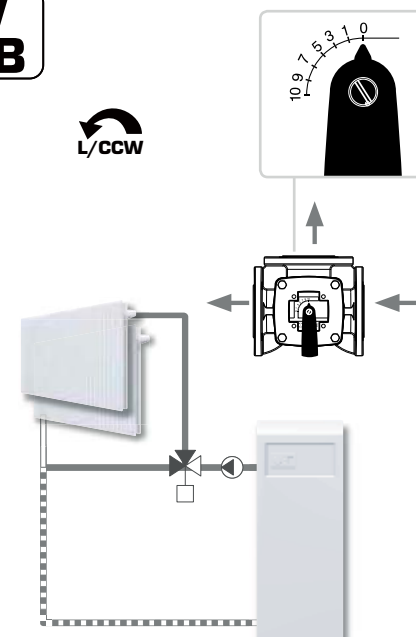

Valve settings


V 3A

R/CW

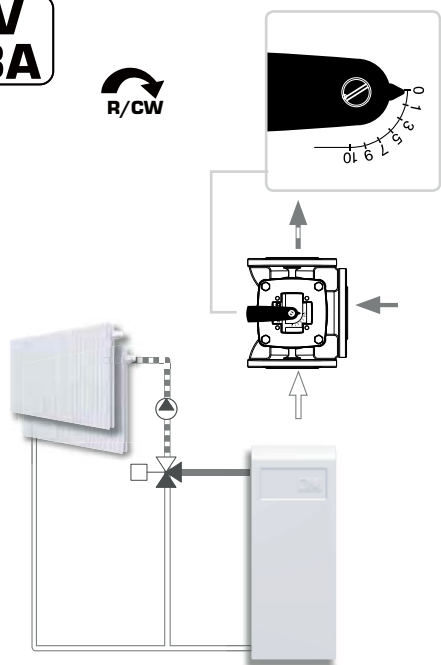


V 3B

L/CCW

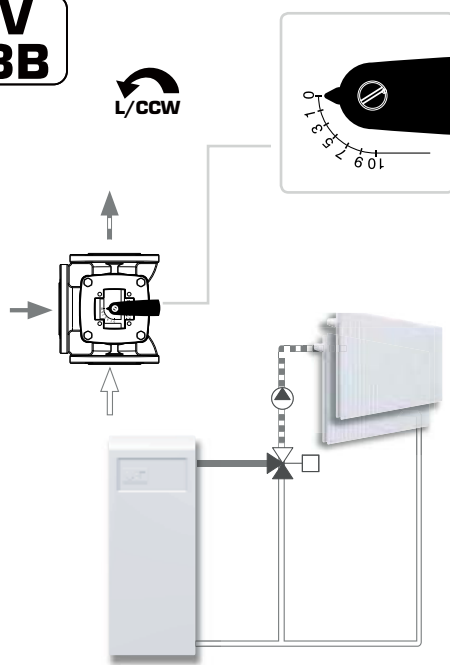


V 4A

R/CW

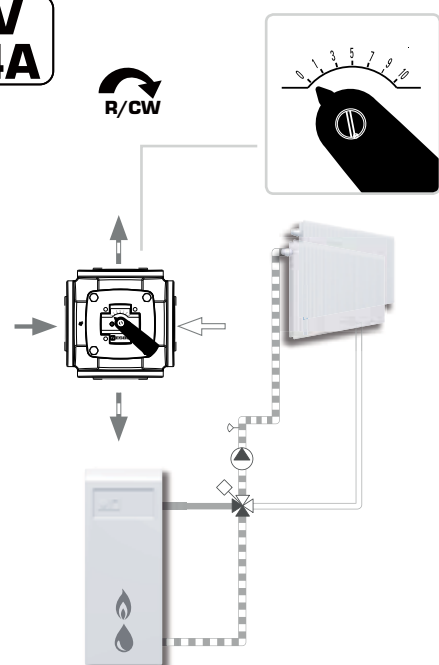


V 4B

L/CCW

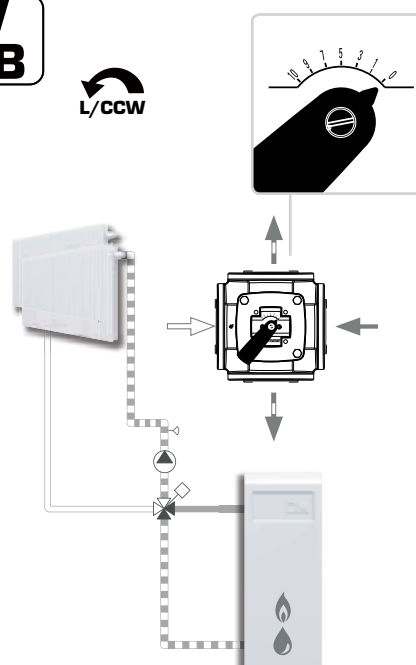


Valve Assembly


**V
5**

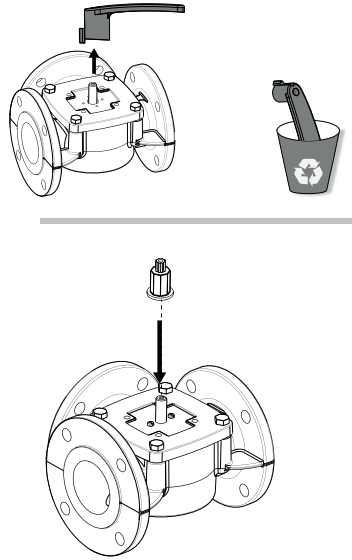


**V
6**

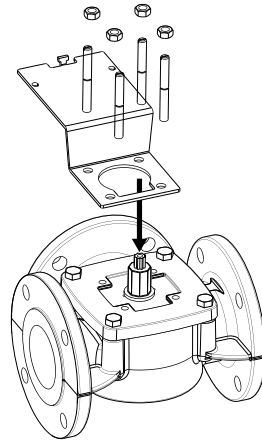

**V
7**

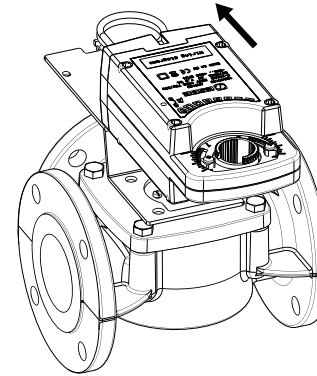


**V
8**

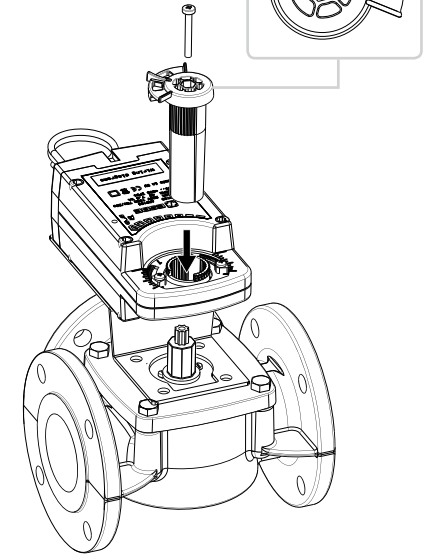

Actuator Settings Valve Assembly

**V
9A**

= 90°

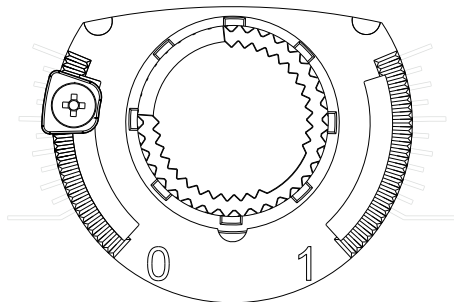


**V
9B**


Limiting working range • Clockwise working direction (R/CW)



Open
position

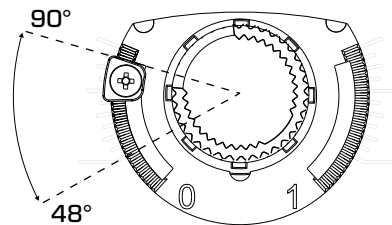


Example R/CW working range 0° - 75°

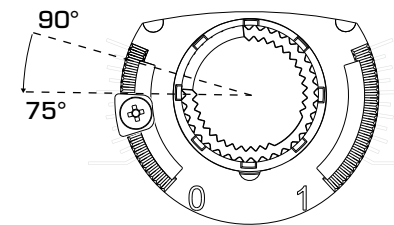

i

ARD169/
ARD269
Dip Switch 4



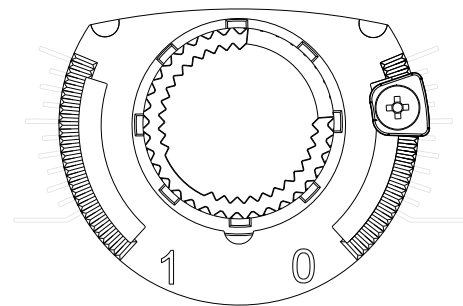


**V
9C**


Limiting working range • Counter clockwise working direction (L/CCW)

Max working range
0° – 90°


Min working range
0° – 48°

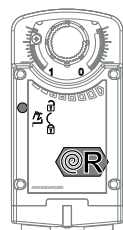

Open
position

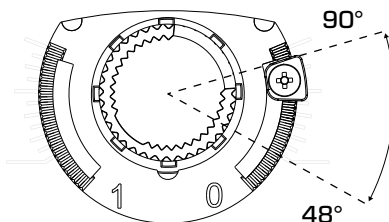

Exampel L/CCW working range 0°- 75°

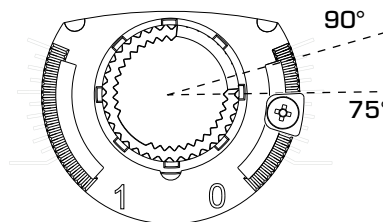

i

ARD169/
ARD269
Dip Switch 4






Manual operation


**V
10A**



**V
10B**

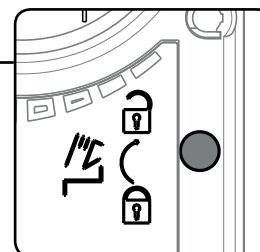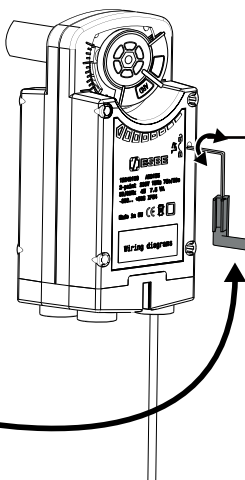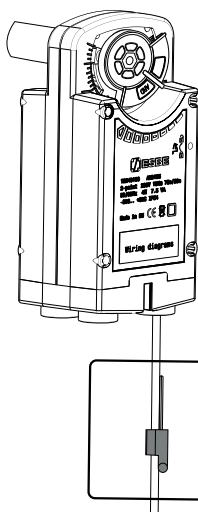

**V
10C**

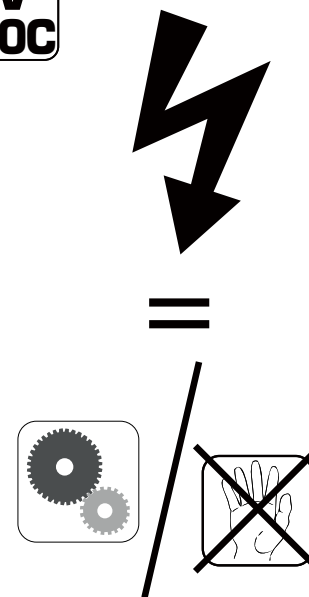

**V
11**  **i**

ARD100/ARD200
Electrical
Settings



По вопросам продаж и технической поддержки обращайтесь:

сайт: esbe.pro-solution.ru эл. почта: ebs@pro-solution.ru телефон: 8 800 511 88 70

Астрахань: +7 (851) 299-46-80

Барнаул: +7 (385) 237-96-76

Белгород: +7 (472) 220-58-80

Владимир: +7 (492) 249-51-33

Волгоград: +7 (844) 245-94-42

Екатеринбург: +7 (343) 302-14-75

Ижевск: +7 (341) 220-90-75

Казань: +7 (843) 207-19-05

Калининград: +7 (401) 272-21-36

Кемерово: +7 (384) 221-56-70

Киров: +7 (833) 220-58-70

Краснодар: +7 (861) 238-86-59

Красноярск: +7 (391) 989-82-67

Курск: +7 (471) 223-80-45

Липецк: +7 (474) 220-01-75

Москва: +7 (499) 404-24-72

Набережные Челны: +7 (855) 291-01-32

Нижний Новгород: +7 (831) 200-34-65

Новосибирск: +7 (383) 235-95-48

Омск: +7 (381) 299-16-70

Оренбург: +7 (353) 248-64-35

Пермь: +7 (342) 233-81-65

Ростов-на-Дону: +7 (863) 309-14-65

Рязань: +7 (491) 277-61-95

Самара: +7 (846) 219-28-25

Санкт-Петербург: +7 (812) 660-57-09

Саратов: +7 (845) 239-86-35

Смоленск: +7 (481) 251-55-32

Ставрополь: +7 (865) 257-76-63

Сургут: +7 (346) 277-96-35

Тверь: +7 (482) 239-50-56

Тула: +7 (487) 244-05-30

Тюмень: +7 (345) 256-94-75

Ульяновск: +7 (842) 242-51-95

Уфа: +7 (347) 258-82-65

Хабаровск: +7 (421) 292-95-69

Чебоксары: +7 (835) 228-50-89

Челябинск: +7 (351) 277-89-65

Ярославль: +7 (485) 267-02-35

Россия и другие страны ТС. Доставка в любой город.