



**SERIES ARD100/ARD200**

**ESBE®**  
**NO.1 IN HYDRONIC SYSTEM CONTROL**


Mtrl.nr: 9814 09 41 • Ritn.nr 8456 vers. A • Rev 1512



Series ARD100  
Series ARD200

CE

|                                        |      |
|----------------------------------------|------|
| LVD 2006/95/EC valid until April 19th  | 2016 |
| LVD 2014/35/EU valid from April 20th   | 2016 |
| EMC 2004/108/EC valid until April 19th | 2016 |
| EMC 2014/30/EU valid from April 20th   | 2016 |
| RoHS 2011/65/EU                        |      |

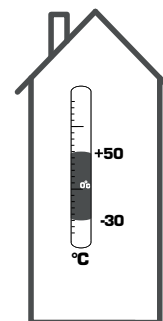

Series ARD100









Series ARD200



**ARD100/  
ARD200  
Valve  
Assembly**


**ARD100/  
ARD200  
Damper  
Assembly**

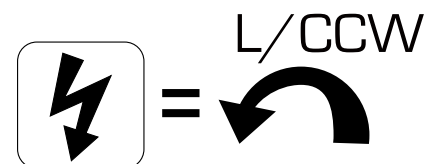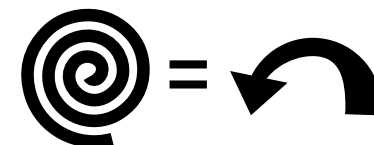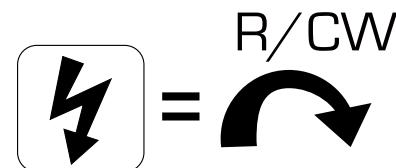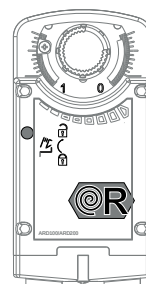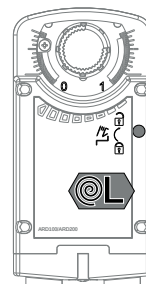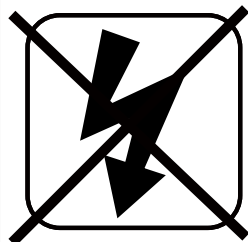

## ARD155/ARD157/ ARD255/ARD257

**E  
2A**

2-point

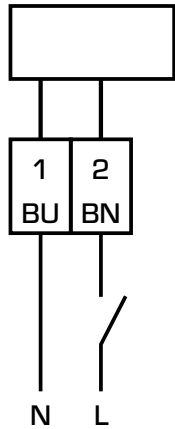


ARD155/ARD255 = 85...265V AC/DC

ARD157/ARD257 = 19...29V AC/DC

## ARD169/ARD269




**E  
2B**

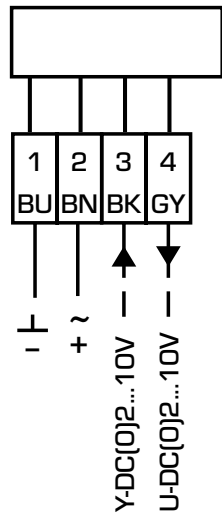

AC 19...29 V  
DC 19...29 V

Y-DC(0)2...10V  
U-DC(0)2...10V


**i**

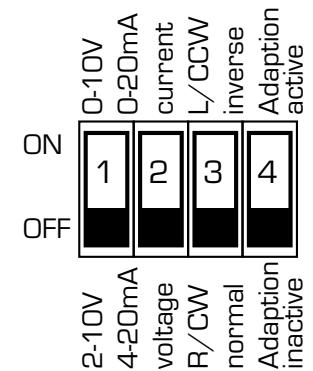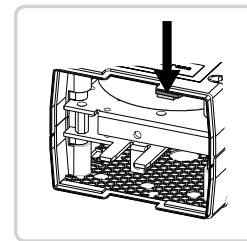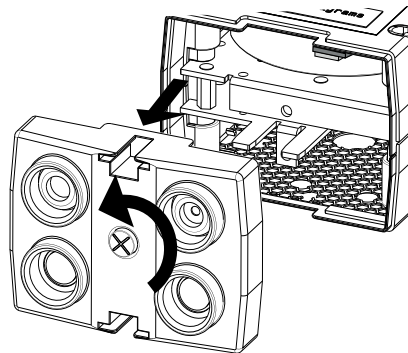

R/CW=Clockwise working direction  
L/CCW=Counter clockwise working direction

# ARD169/ARD269

 
**E  
3a**



=

Y=0 - 10 V DC/0-20mA

 U = 0-10 V DC




=



Y = 2 - 10 V DC/4-20mA


U = 2 -10 V DC

 **E  
3b**



=

 Current (mA)




=





Voltage (V DC)

 
**E  
3c**



=


 
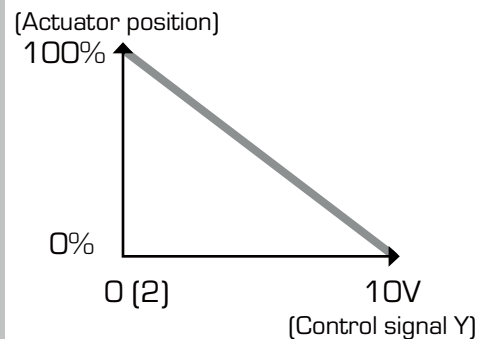


=

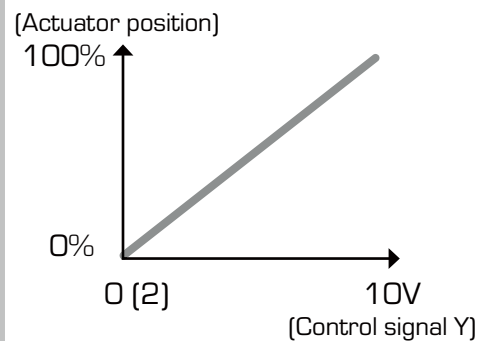

**E  
3d**

   Adaption working range





## По вопросам продаж и технической поддержки обращайтесь:

сайт: [esbe.pro-solution.ru](http://esbe.pro-solution.ru) эл. почта: [ebs@pro-solution.ru](mailto:ebs@pro-solution.ru) телефон: 8 800 511 88 70

Астрахань: +7 (851) 299-46-80

Барнаул: +7 (385) 237-96-76

Белгород: +7 (472) 220-58-80

Владимир: +7 (492) 249-51-33

Волгоград: +7 (844) 245-94-42

Екатеринбург: +7 (343) 302-14-75

Ижевск: +7 (341) 220-90-75

Казань: +7 (843) 207-19-05

Калининград: +7 (401) 272-21-36

Кемерово: +7 (384) 221-56-70

Киров: +7 (833) 220-58-70

Краснодар: +7 (861) 238-86-59

Красноярск: +7 (391) 989-82-67

Курск: +7 (471) 223-80-45

Липецк: +7 (474) 220-01-75

Москва: +7 (499) 404-24-72

Набережные Челны: +7 (855) 291-01-32

Нижний Новгород: +7 (831) 200-34-65

Новосибирск: +7 (383) 235-95-48

Омск: +7 (381) 299-16-70

Оренбург: +7 (353) 248-64-35

Пермь: +7 (342) 233-81-65

Ростов-на-Дону: +7 (863) 309-14-65

Рязань: +7 (491) 277-61-95

Самара: +7 (846) 219-28-25

Санкт-Петербург: +7 (812) 660-57-09

Саратов: +7 (845) 239-86-35

Смоленск: +7 (481) 251-55-32

Ставрополь: +7 (865) 257-76-63

Сургут: +7 (346) 277-96-35

Тверь: +7 (482) 239-50-56

Тула: +7 (487) 244-05-30

Тюмень: +7 (345) 256-94-75

Ульяновск: +7 (842) 242-51-95

Уфа: +7 (347) 258-82-65

Хабаровск: +7 (421) 292-95-69

Чебоксары: +7 (835) 228-50-89

Челябинск: +7 (351) 277-89-65

Ярославль: +7 (485) 267-02-35

Россия и другие страны ТС. Доставка в любой город.