



Damper Assembly



SERIES ARD100/ARD200



NO.1 IN HYDRONIC SYSTEM CONTROL

Mtrl.nr: 9814 09 63 • Ritn.nr: 8472 vers. A • Rev 1512



Series ARD100
Series ARD200

CE


LVD 2006/95/EC valid until April 19th 2016

LVD 2014/35/EU valid from April 20th 2016

EMC 2004/108/EC valid until April 19th 2016

EMC 2014/30/EU valid from April 20th 2016


RoHS 2011/65/EU

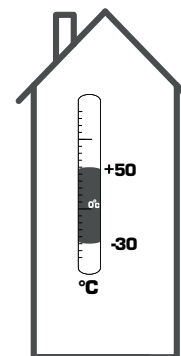


Series ARD100









Series ARD200

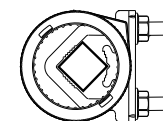

9 - 18 mm

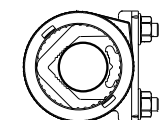



9 - 26 mm

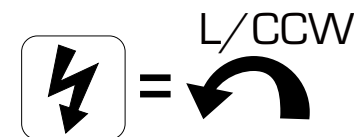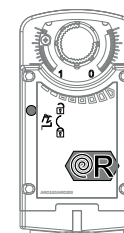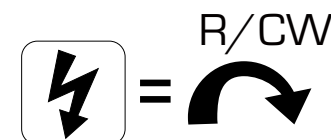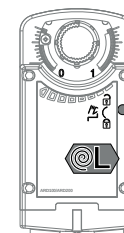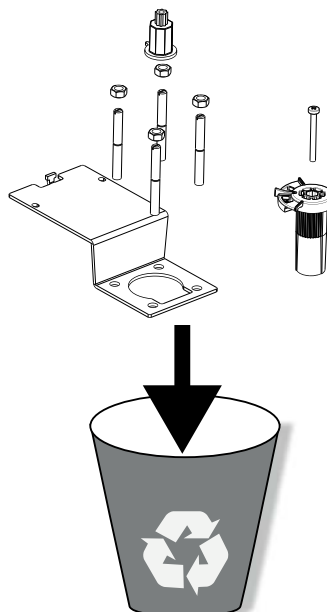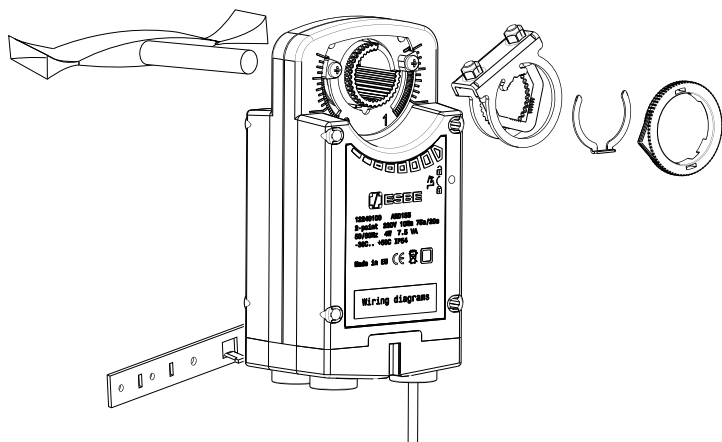

Actuator Settings **D**amper Assembly

**D
1A**

 = 90°

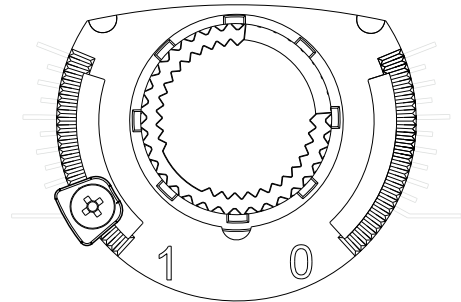
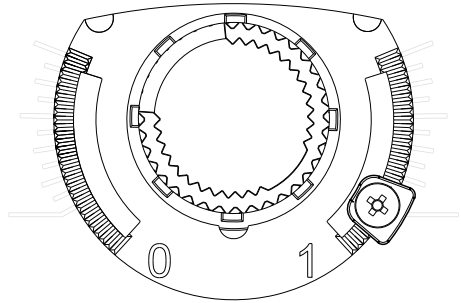


Max working range
0° – 90°


Min working range
0° – 45°

**D
1B**

Limiting working range • Clockwise working direction (R/CW)

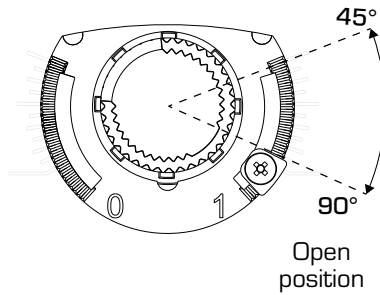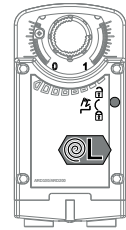

Example R/CW working range 0°- 70°

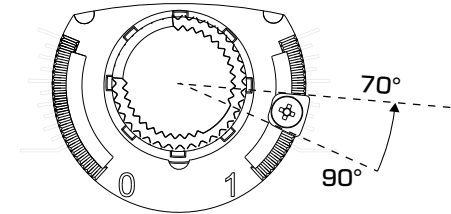


i

ARD164/
ARD269
Dip Switch 4




**D
1C**

Limiting working range • Counter clockwise working direction (L/CCW)

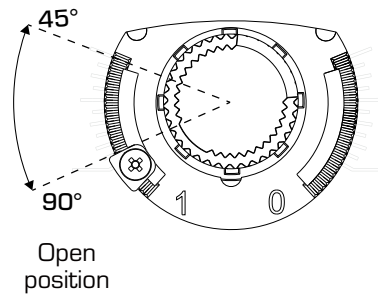

Example L/CCW working range 0°- 60°


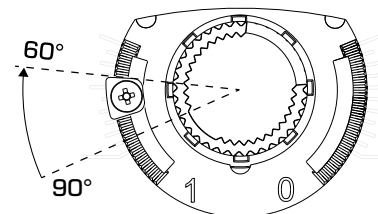


i



ARD169/
ARD269
Dip Switch 4



 i




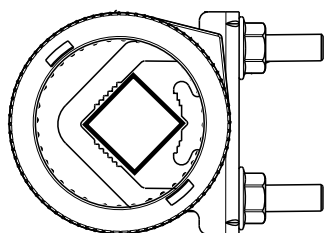


9 – 18 mm





 
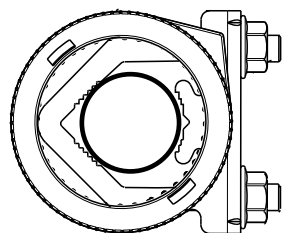


9 – 26 mm



i

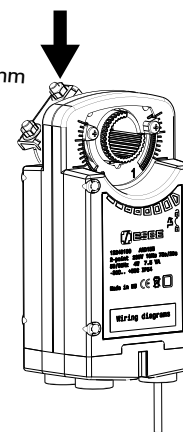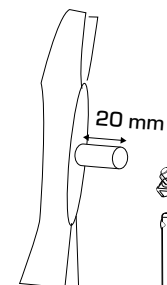
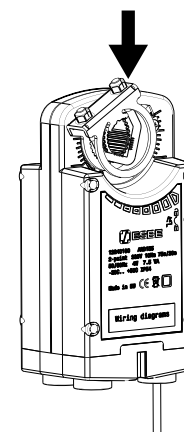
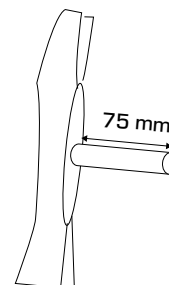


i

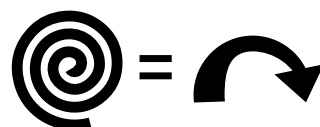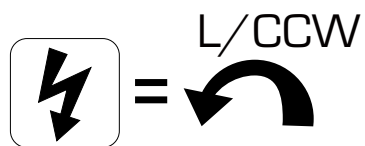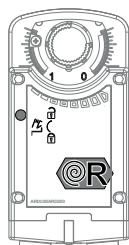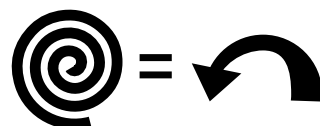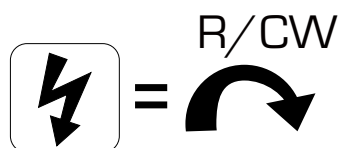
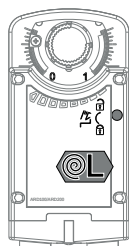


**D
2**

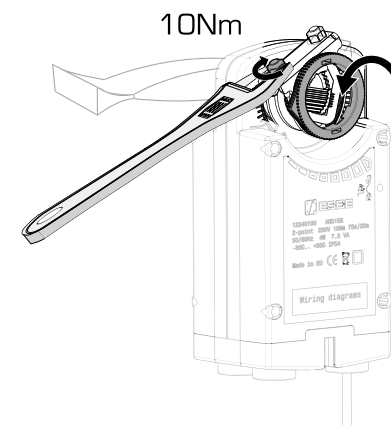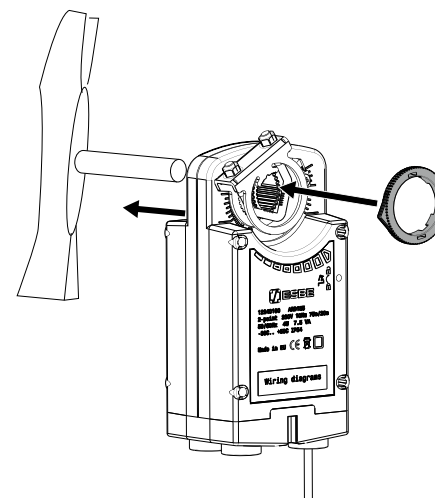

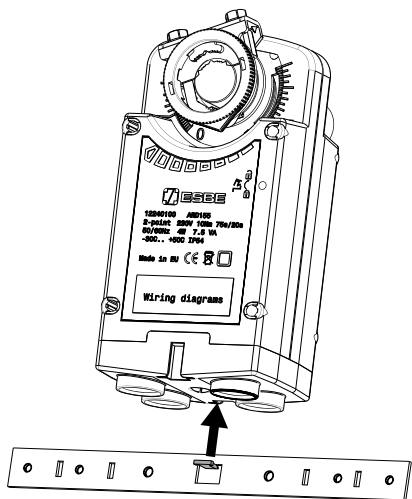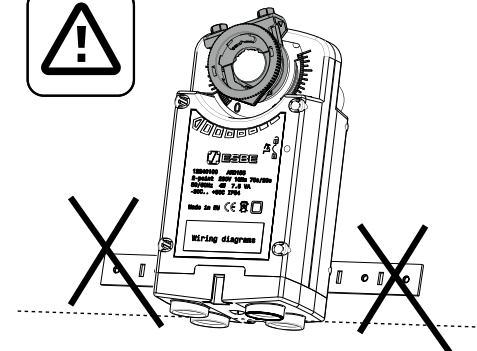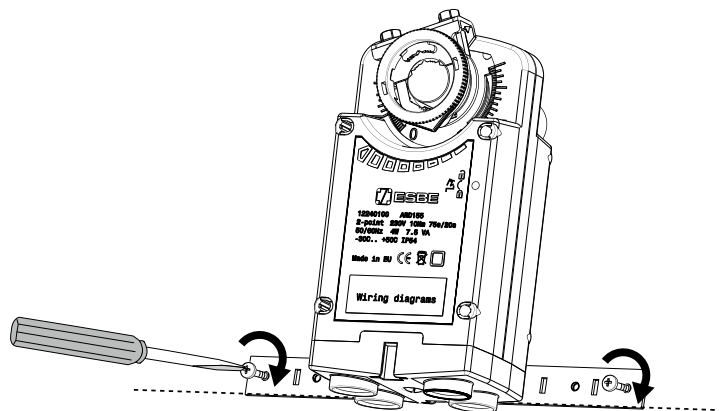D 3**D 4**

Manual operation

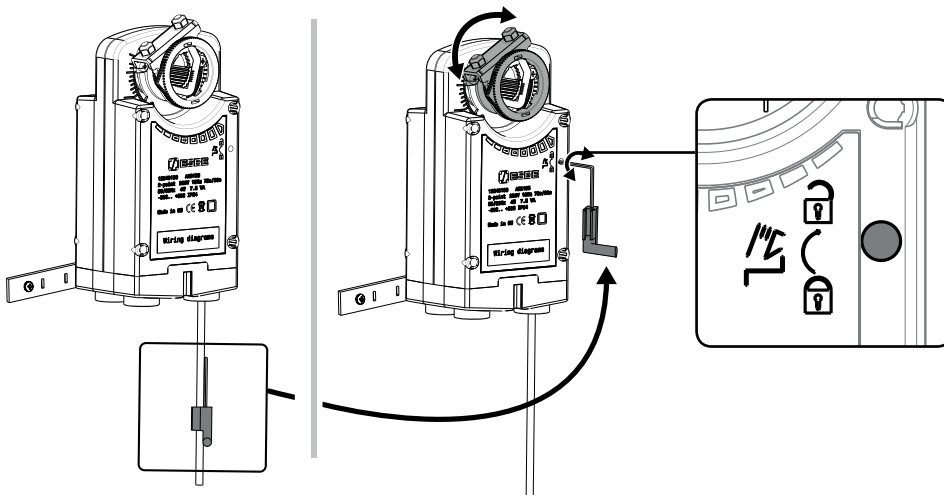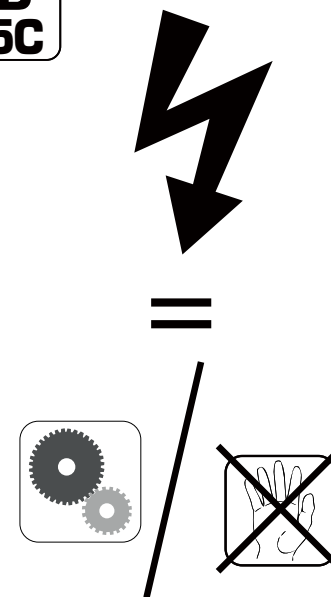D 5A**D 5B****D 5C****D 6****i**

ARD100/ARD200 Electrical Settings



По вопросам продаж и технической поддержки обращайтесь:

сайт: esbe.pro-solution.ru эл. почта: ebs@pro-solution.ru телефон: 8 800 511 88 70

Астрахань: +7 (851) 299-46-80

Барнаул: +7 (385) 237-96-76

Белгород: +7 (472) 220-58-80

Владимир: +7 (492) 249-51-33

Волгоград: +7 (844) 245-94-42

Екатеринбург: +7 (343) 302-14-75

Ижевск: +7 (341) 220-90-75

Казань: +7 (843) 207-19-05

Калининград: +7 (401) 272-21-36

Кемерово: +7 (384) 221-56-70

Киров: +7 (833) 220-58-70

Краснодар: +7 (861) 238-86-59

Красноярск: +7 (391) 989-82-67

Курск: +7 (471) 223-80-45

Липецк: +7 (474) 220-01-75

Москва: +7 (499) 404-24-72

Набережные Челны: +7 (855) 291-01-32

Нижний Новгород: +7 (831) 200-34-65

Новосибирск: +7 (383) 235-95-48

Омск: +7 (381) 299-16-70

Оренбург: +7 (353) 248-64-35

Пермь: +7 (342) 233-81-65

Ростов-на-Дону: +7 (863) 309-14-65

Рязань: +7 (491) 277-61-95

Самара: +7 (846) 219-28-25

Санкт-Петербург: +7 (812) 660-57-09

Саратов: +7 (845) 239-86-35

Смоленск: +7 (481) 251-55-32

Ставрополь: +7 (865) 257-76-63

Сургут: +7 (346) 277-96-35

Тверь: +7 (482) 239-50-56

Тула: +7 (487) 244-05-30

Тюмень: +7 (345) 256-94-75

Ульяновск: +7 (842) 242-51-95

Уфа: +7 (347) 258-82-65

Хабаровск: +7 (421) 292-95-69

Чебоксары: +7 (835) 228-50-89

Челябинск: +7 (351) 277-89-65

Ярославль: +7 (485) 267-02-35

Россия и другие страны ТС. Доставка в любой город.